


安装指导

Installation Instruction

适用于 1/2", 7/8", 1 1/4" 和 1 5/8" 馈缆快速接地夹
 Used for 1/2", 7/8", 1 1/4" and 1 5/8" Universal Feeder Grounding Kits


No. : MA_SLGK009
 Rev.: A 11.2011

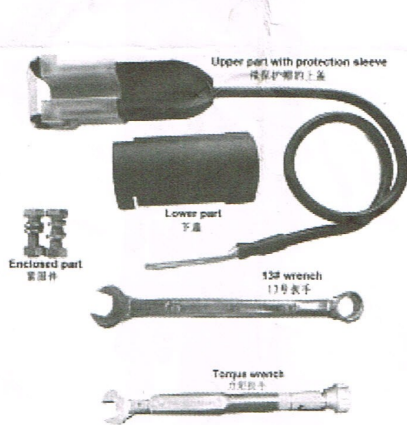


Step 1. Prepare piece parts and the tool. 准备零件及工具.




Step 2. Straighten and clean the cable about 200mm for the grounding kits installation. 为接地卡安装, 校直并清洁电缆约 200mm.

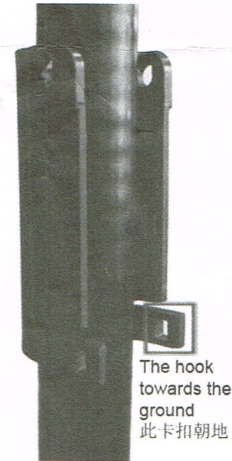


Step 3. Place the lower part on the feeder cable as shown; please make sure the hook towards the ground. 照图示将下盖装在电缆上, 确保卡扣朝向地面方向.

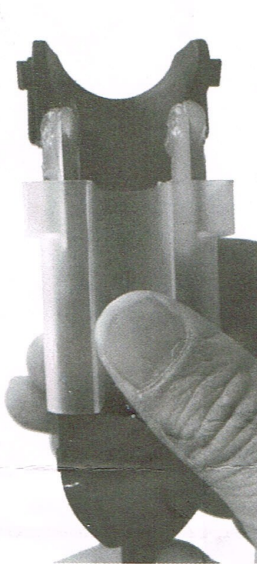


Step 4. Remove the tape and pull the protection sleeve as shown until it stop at the rib. 移除胶带并将保护盖向后拉至定位凸台处.

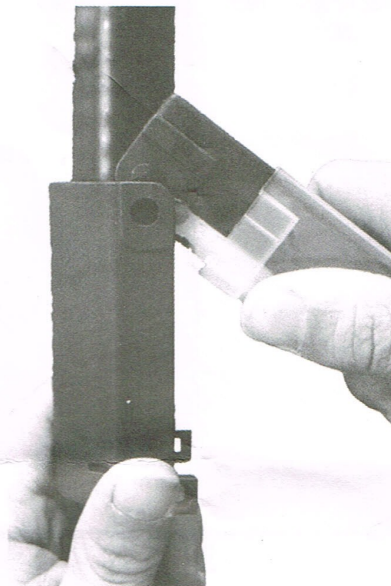


Step 5. Place the upper part on the lower part in an angle, then slide it until the columns of the upper part fits into the hole of the lower part. 将上盖以图示角度放在下盖上, 滑动上盖直到它上面的转轴与下盖的定位孔配合.

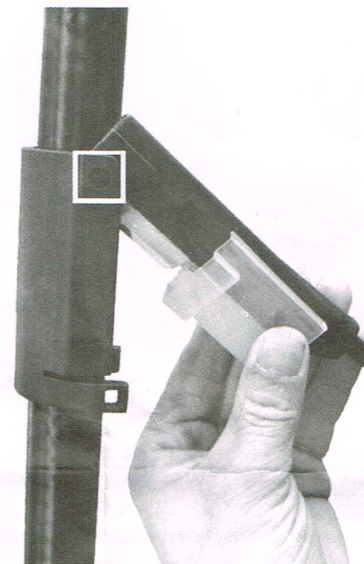

Step 6. Make sure the fitting of the upper and lower part hinge area at both sides, and then remove the protection sleeve on the upper part. 确保上下盖左右两侧转轴全部配合好, 然后移除保护盖.

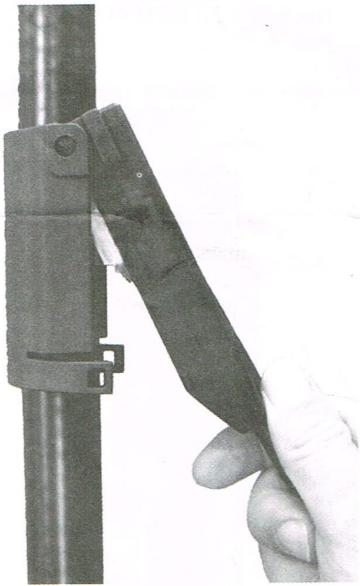


Step 7. Press the upper part onto the lower together slowly until stop. 慢慢将上盖推至下盖到位.

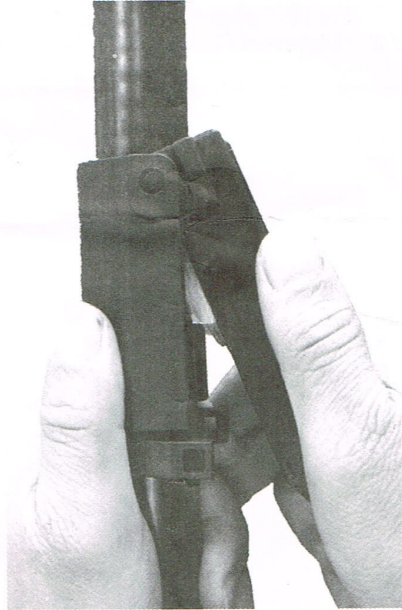

Step 8. Keep the lower part and the cable still, push the upper part onto the lower part quickly to get them snap together, You will hear a clicking sound when snapped. **Note:** It is important to be quick. 保持下盖及电缆不动, 迅速压上盖使其咬合在下盖上, 这时会有咔的一声轻. **注意:** 请务必迅速完成.



Step 9. Make sure that the two pieces are locked tight at both sides. 确保上下盖两侧的卡扣联结部分全部锁紧.

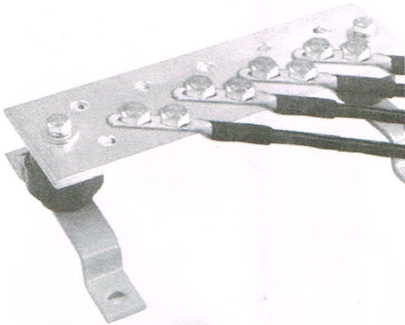

Step 10. Install the grounding wire with the enclosed parts, recommend torque 6-8N.m. 使用附带的紧固件安装接地线, 推荐扭矩为 6-8N.m.

说明: 1) 本说明中信息如有变动, 恕不另行通知;

2) 罗森伯格公司申明对于不正确的使用或拆卸操作所导致的后果不负任何责任。

Note: 1) Information in this instruction is subject to change without notice;

2) Rosenberger disclaims any responsibility for the result of improper usage.