

# User Guide





# **IMPORTANT SAFETY INSTRUCTIONS**



The device has been tested for conformance to safety regulations and requirements, and has been certified for international use. However, like all electronic equipment, the device should be used with care. Please read and follow the safety instructions to protect yourself from possible injury and to minimize the risk of damage to the unit.

- Please do not place the display screen towards the ground to avoid scratching the LCD surface.
- Please avoid heavy impact.
- Please do not use chemical solutions to clean this product. Simply wipe with a clean soft cloth to maintain the brightness of the surface.
- Please do not block any vent hole.
- > Please follow the instructions and trouble-shooting to adjust the product.
- Internal adjustments or repairs must be performed by a qualified technician.
- > Please keep user guide for future reference.
- Please unplug the power and remove the battery if long-term no-use, or thunder weather

# **FEATURES**


- Support multiple signal inputs 3G-SDI, HDMI, DVI and VGA.
- Multiple View Display supports quad view split from different input singles simultaneously.
- Ultra HD 4K screens containing 8.3 million pixel (3840×2160), so the resolution is four times that of Full HD.
- 3D LUT for Accurate Color Reproduction and Color space display (Native/Rec.709/User1~User3).
- > Support to upload 3D LUT table via USB port.
- Equip HDR function.
- Image flip offers great convenience for user's user to place the monitor with various mounting methods under different conditions. Users can view the monitor normally no matter what mounting angles.
- > Perfect size for both suitcase and rack mount.
- > Wireless HDMI function for optional.

# Contents

1.	PRODUCT DESCRIPTION	3
2.	SUN SHADE INSTALLATION	8
3.	MENU SETTING	9
4.	ACCESSORIES	24
5.	PARAMETERS	27
6.	TROUBLE SHOOTING	28

# **1. PRODUCT DESCRIPTION**

Front

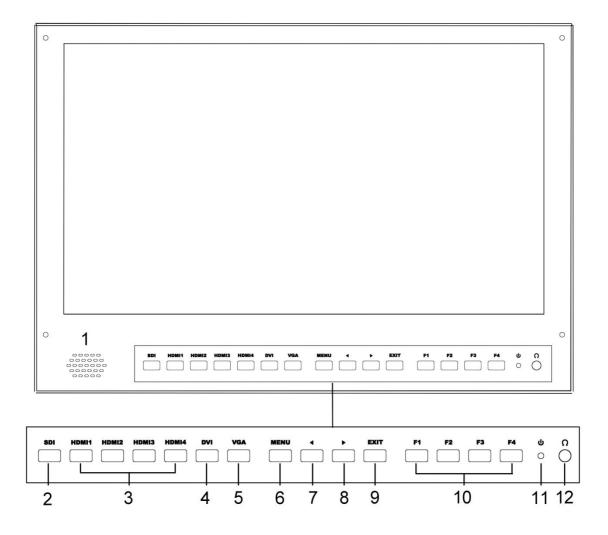

#### 1. Speaker

#### 2. **SDI**

Signal switch to SDI mode when light on.

#### 3. HDMI 1 ~ 4

Signal switch to HDMI mode when light on.

#### 4. **DVI**

Signal switch to DVI mode when light on.

#### 5. **VGA**

Signal switch to VGA mode when light on.

#### 6. **MENU**

Press to enter menu.

Press to enter option in the menu.

#### 7. ◀

Select option in the menu.

Decrease the option value.

Before enter the menu, single press to activate volume, press again to decrease the volume.

#### 8. 🕨

Select option in the menu.

Increase the option value.

Before enter the menu, single press to activate volume, press again to increase the volume.

#### 9. **EXIT**

Back or exit.

#### 10. F1~F4 User definable buttons

Default function options:


- F1: Color Space F2: Display Mode
- **F3:** Safety Marker **F4:** Aspect

(functions can be customized by long keep pressing any one of the

#### 4 buttons)

- 11. Power indicating light (green light: working).
- 12. Earphone jack

Back

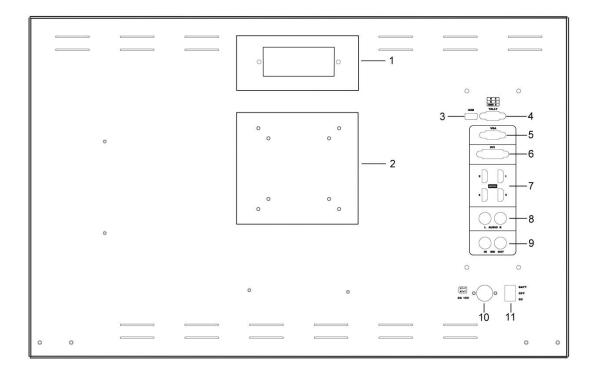

- 1. Handle (Only available for BM230/BM280)
- 2. VESA 75×75 & VESA 100×100 mounting port
- 3. USB port
- 4. TALLY port
- 5. VGA input port
- 6. DVI input port
- 7. HDMI input port×4。

HDMI 1 & HDMI 2 : HDMI2.0, support 4K 60Hz

HDMI 3 & HDMI 4: HDMI1.4, support to 4K 30Hz

**NOTE**: HDR is only available under HDMI 1 signal input.

- 8. Audio L/R
- 9. SDI input/output ports

#### 10. DC IN (XLR) terminal

Connects the DC power supply to the monitor.

$\frown$	Pin number	Signal
$\begin{pmatrix} 1 & 4 \\ \circ 2 & 3 \\ \circ & 0 \end{pmatrix}$	1	GND
	23	


(4)	+15V
-----	------

#### 11. Power switch


"II" is battery power, "o" is power off, "I" is DC power.

# 2. SUN SHADE INSTALLATION

1. Put the sun shade on the suitcase, and match the magnets on both sides.

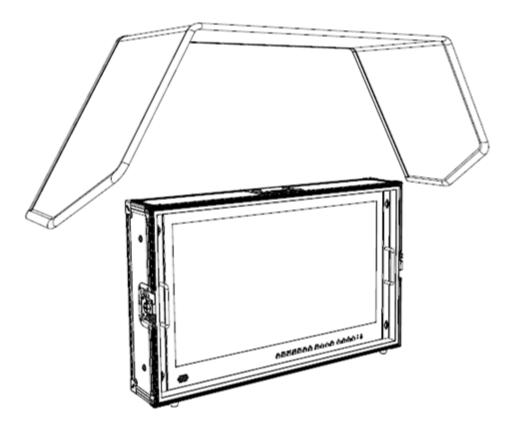

2. As shown below after finished.

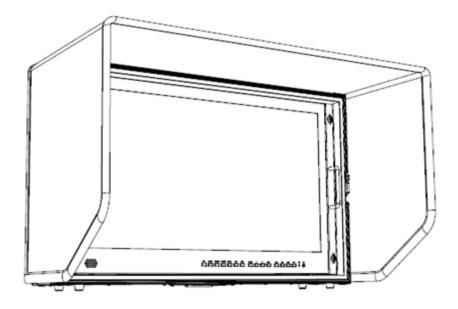

# **3. MENU SETTING**

Please check whether the device is connected well or not.

#### 3-1. F1~F4 user definable shortcut buttons

Long keep pressing any one of the 4 buttons for 3-5 seconds to activate shortcut menu setting. Option selected will be highlighted as white. option will be highlighted as yellow, unavailable option will be highlighted as gray.

Select option via "◀/▶" buttons.

Then press "MENU" button to confirm to set as default option.

Shortcut functions can be customized to meet user's needs as following:

NO.	Shortcut Menu when long press any F shortcut button
1	Center Marker
2	Safety Marker

3	Aspect Marker
4	Aspect
5	Underscan
6	Check Field
7	Freeze
8	Pixel to Pixel
9	Peaking
10	False Color
11	Exposure (Only available under SDI mode)
12	Histogram(Only available under SDI mode)
13	Time Code (Only available under SDI mode)
14	Display Mode
15	Disp Mirror
16	Color Space

#### Default options:

- F1: Color Space F2: Display Mode
- F3: Safety Marker F4: Aspect

#### 3-2. ◀ / ► Buttons Operation

Under non menu screen, press "◄/▶" buttons to activate volume bar,

Use "◀ / ▶" buttons to select the desired option.

Press the "MENU" button to select Volume, Brightness, Contrast, Saturation, Hue, Sharpness.

#### 3-3. MENU Operation

When power on, press "MENU" on the device, the menu of function setting will display on the screen.

Press "◀ / ►" button to choose menu;

Then press "MENU" button to confirm;

Press "EXIT" button to return / exit menu.

## 3-3-1. Picture



	Brightness		0~100	
	Contrast	0~100		
	Saturation	0~100		
	Hue	0~100		
	Sharpness	0~4		
	Color Space	Native/Rec.709/User1~User3		
Picture	HDR	Off/Auto/HDR10		
	Backlight Mode	Standard/Outdoor/User		
	Backlight	0~100		
	Temperature	9300/7500/6	6500/5800/User	
	Red Gain	0~256		
	Green Gain	0~256	Note: Available only under "User" mode.	
	Blue Gain	0~256		

#### **Brightness**

Adjust the general brightness of the LCD. For example, if it uses outside in bright conditions, increase the LCD brightness to make it easier to view.

#### Contrast

Increase or decrease the range between the bright and dark areas of the image. High contrast can reveal detail and depth in the image, and low contrast can make the image appear soft and flat.

#### Saturation

Adjust the color intensity. Press "◀/▶" buttons to increase or decrease the color intensity.

#### Hue

It means tint. Use this setting to choose the tint from 0 to 100.

#### Sharpness

Increase or decrease the sharpness of the image. When the sharpness of image is insufficient, the value of sharpness can be increased to make the image clearer.

#### **Color Space**

Selects the color space from among [Native], [Rec.709] [User1~User3]:

- Saturation/Hue/Color Temperature is only available under Native mode.
- Select [AUTO] or [HDR10] mode under HDR function, the color space will be saved as Native mode automatically. It can be only changed to other color space mode by hand.
- It supports to upload user-defined Lut table "User1~User3".
  - User-defined Lut table only support RGB format. If the format is not correct, please transform it to the correct format by using tool "Lut Converter" (See appendix 1 for details) and named as User1.cube, User2.cube or User3.cube.
  - Copy the User-defined Lut table to flash disk and insert it to the device, the screen displays a prompt message to show whether to upgrade. Select upgrade, the device will be loading automatically in a black screen and then restart after finishing loading.
    - Requirements for flash disk

Format: FAT32

Memory: <16G

File directory: root directory

Must be formatting before using it

- Please note that the responding time for loading user-defined Lut table will be a bit slower. Please wait patiently.
- The device only supports loading one table at a time. If needs to load more than one tables, please load them one by one.

#### HDR

Select HDR from among [Off], [Auto], [HDR10].

- HDR is only available under HDMI 1 signal input.
- HDR under AUTO or DHR10 mode, and the input signal support HDR, the below function is disabled:

Contrast, Brightness, Saturation, Hue, Sharpness, Color Space, BackLight

**Color Temperature** 

• [Auto]

Automatically recognize whether the input HDMI signal supports HDR. If it supports, the input signal shows as the HDR10 performance. If it doesn't, HDR function is disabled. It's suggested select [Auto] when use HDR function.

• [HDR10]

Do not recognize whether the input HDMI signal supports HDR, it will activate the HDR function enforcedly when input signal. If the input signal does not support the HDR function, the image displays abnormal color.

#### **Backlight Mode**

Select Backlight Mode from among [Standard], [Outdoor], [User].

#### Backlight


It is only available under [User] mode.

#### Temperature

Adjust the color temperature to make the image warmer (Yellow) or colder (Blue). Increase the value to make the image be warmer, decrease the value to make the image be colder. User can use this function to strengthen, weaken or balance the image color according requirements. The standard white light color temperature is 6500K.

Note: Only available under "User" mode to adjust Color Gain.

## 3-3-2.Function

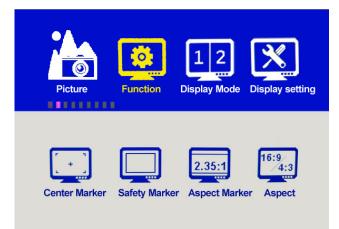

#### Center Marker

Select On, it will appear "+" marker on center of screen.

#### Safety Marker

Use this setting to set off the safety marker or choose the one of the safety markers: [OFF], [95%], [93%], [90%], [88%], [85%], [80%].

#### Aspect Marker

Display the different aspect of the displayed image. [OFF], [Full], [17:9], [16:9], [4:3], [1.85:1], [2.35:1].

#### Aspect

Switch aspect ratio setting among from [Full][17:9][16:9][4:3][1.85:1][2.35:1]. For example:

	Center Marker	ON, OFF		
	Safety Marker	OFF, 95%, 93%, 90%, 88%, 85%, 80%		
	Aspect Marker	OFF, Full, 17:9, 16:9, 4:3, 1.85:1, 2.35:1		
	Aspect	Full ,17:9, 16:9, 4:3, 1.85:1, 2.35:1		
	Underscan	ON, OFF		
	Pixel To Pixel	ON, OFF		
	Check Filed	OFF, Red, Green, Blue		
	Freeze	ON, OFF		
Function	Peaking	ON, OFF		
	Peaking color	Red/Green/Blue/White	Only available	
	Peaking level	0~100	when under SDI Mode.	
	False Color	OFF/ON		
	Exposure	OFF/ON	Only available	
	Exposure level	0~100	when under SDI Mode.	
	Histogram	OFF/ON		
	Time Code	OFF/LTC/VITC		

In [Full] mode, images are scaled to fill the entire screen.

In [4:3] mode, images are scaled up or down to fill the maximum 4:3 portion of the screen.

In [16:9] mode, images are scaled to fill the entire screen if the device aspect is 16:9.

#### Underscan

If the image shows size error, use this setting to zoom in/out pictures automatically when receiving HDMI signals

#### **Pixel to Pixel**

The pixel to pixel is a monitor set to 1:1 pixel mapping with native fixed pixels, which avoids loss of sharpness due to scaling artifacts and normally avoids incorrect aspect ratio due to stretching.

#### **Check Field**

Use the check field modes for monitor calibration or to analyze individual color components of an image. The device preset in Blue, Green, and Red check field modes, only the selected color will be shown.

#### Peaking

The peaking is used to aid the camera operator in obtaining the sharpest possible picture. Select "On" to display colored outlines around sharp areas of the image.

NOTE: Peaking color and level only can be changed when under SDI mode.



#### False Color

This monitor has a false color filter to aid in the setting of camera exposure. As the camera Iris is adjusted, elements of the image will change color based on the luminance or brightness values. This enables proper exposure to be achieved without the use of costly, complicated external equipment.




#### Exposure & Exposure Level

The exposure feature helps the user achieve optimum exposure by displaying diagonal lines over areas of the image that exceed the setting exposure level.

The exposure level can be set to 0~100.

Note: Only available when under SDI mode.

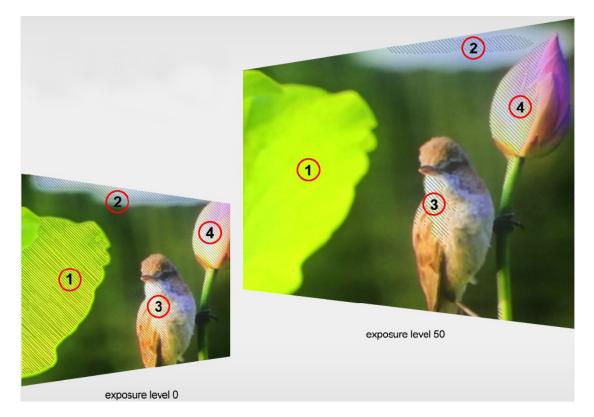

#### Histogram

The histogram makes users view visually the exposure of whole and each RGM channels. It has the full contrast rang of video for easy color correction during post production.

NOTE: Only available when under SDI mode.


#### Time Code

The Time Code supports Longitudinal time code (LTC) and Vertical interval time

code (VITC). The time code display on the monitor is synchronizing with that of Full HD camcorder's. It displays the duration of the clips in hours: minutes: seconds: frames. It's very useful for identifying specific frame in film and video production.

Note: Only available when under SDI mode.

## 3-3-3. Display Mode

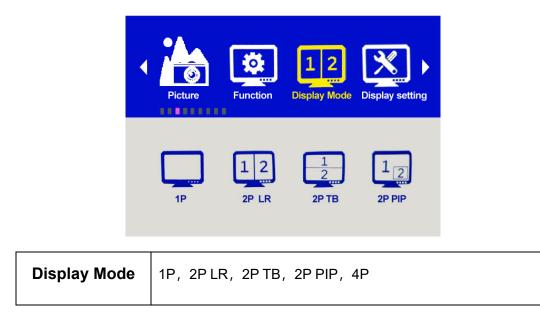

#### **Display Mode**


The monitor presets 1P, 2P LR, 2P TB, 2P PIP, 4P five display modes. This function can be work with Select Region function to meet user's requirement. For example:

In 1P mode, images are scaled to fill the entire screen.

In 2P LR, display two different signals on the left and right sides.

## 3-3-4. Display Setting

Display	Display Rotate	0°, 90°, 180°, 270°	Available when single display.
Setting	Display Mirror	OFF, L/R, U/D	Available when dual display on left and right.

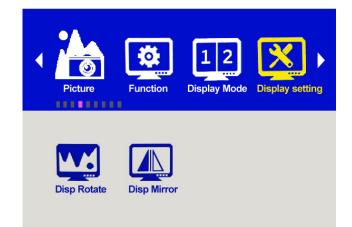

#### **Display Rotate and Display Mirror**

This setting support to flip the image to 0°, 90°, 180°, 270° modes. It is only available when single display.

#### **Display mirror**

This setting displays two different input signals to Light/Right or Up and Down, the user can choose it to view the images according to the requirement. It is only available when dual display on left and right.

## 3-3-5. Select Region



Unavailable		Display mode 1P
Left Side/Right Side/Full		Display mode 2P LR
Select Region	Top Side/Bottom Side/Full	Display mode 2P TB

Main/Sub/Full		Display mode 2P PIP
1P In/1P Out/2	P In/2P Out/3P	Display mode 4P
In/3P Out/4P In/4P Out/4P full		


Note: This Menu is enabled for audio source selection. It is only available when under multi-picture and picture-in-picture mode. Activate the corresponding EN source to select the needed audio and picture under Audio Source function.

## 3-3-6. Input



## 3-3-7. Audio


Input Signal switch to region selected according to users' needs.
-------------------------------------------------------------------

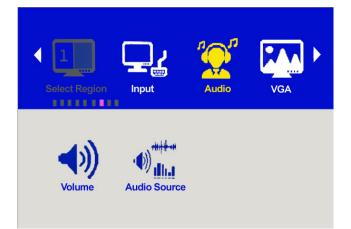

	Volume	0~100	
Audio	Level Meter	OFF/ON	NOTE: Only available when under SDI mode
	Audio Source	Analog/Digital region 1~4	

Digital region 2~4 is only available under multi-displays mode and must activate the corresponding Region under Select Region function at the same time.


## 3-3-8. VGA

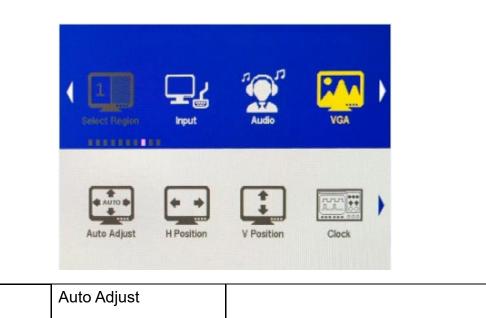

	H Position	0~100
	V Position	0~100
VGA	Clock	
	Phase	0~100

## 3-3-9. System

	Reset	Press to confirm after selected.
	Menu Time	10~60s
	OSD H Position	0~100 (To set menu display area)
	OSD V Position	0~100 (To set menu display area)
	Language	English, Chinese
System	Transparency	0~255 (To set menu transparency)
	Color Calibration	Off/On
	Rotate	0°, 90°, 270°
	Border Width	0~10
	Border Color	R, G, B, W

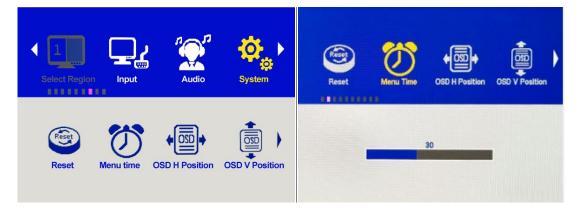

### Reset

If there is any problem unknown, press to confirm after selecting. The monitor will return to default set.

#### Menu Time

Adjust the OSD displaying time form 10 to 60s.

#### **OSD H Position and OSD V Position**

Move OSD horizontally or vertically.

#### Language

Switch between English and Chinese.

#### Transparency

Set Menu transparency. Increase the value, the more transparent it will be.

#### **OSD Rotate**

Flip OSD to three modes.

#### Border Width and Border Color

Information	To display current information.

User can choose the border color among Red, Green, Blue, White. And adjust the thickness by using Border Width function.

This setting is available when display in 2P LR, 2P TB, 2P PIP, 4P mode.



The lines separate the different input

signals means Border.

## 3-3-10. Information



# 4. ACCESSORIES

1.	Folding sun shade cover	1 piece
2.	TALLY connector (in bulk)	1 piece
3.	V-mount or Anton Bauer mounts Power cable	1 piece
4.	V-mount or Anton Bauer mount	1piece
5.	Manual	1 сору
6.	Carry-on suitcase	1 piece
7.	15V DC adapter	1 piece
8.	Battery plate bracket	1 piece
9.	Adapter fixing belt	2 pieces
10.	Base bracket	1 pair
11.	Acrylic screen protector(Optional for BM150 only)	1 piece
12.	WHDI Accessories (optional)	1pair

# 5. PARAMETERS

Display Screen	15.6" 8bit IPS	23.8" IPS	28" IPS
Physical Resolution	3840×2160	3840×2160	3840×2160
Aspect Ratio	16: 9	16: 9	16: 9
Brightness	330cd/m <sup>2</sup>	<b>300cd/</b> m <sup>2</sup>	<b>300cd/</b> m <sup>2</sup>
Contrast	1000: 1	1000: 1	1000: 1
Viewing Angle	176°/ 176°(H/V)	178°/ 178°(H/V)	170°/ 160°(H/V)
	DC12~24V	DC 12~24V	DC12~24V
Input Voltage	(XLR)	(XLR)	(XLR)
Input Signal	3G-SDI, HDMI DVI, VGA, Audio, USB and TALLY	3G-SDI, HDMI DVI, VGA, Audio, USB and TALLY	3G-SDI, HDMI DVI, VGA, Audio, USB and TALLY
Output Signal	3G-SDI	3G-SDI	3G-SDI
Power Consumption	≤18W	≤41W	≤53W
Operating Temperature	0°C~60°C	0°C~60°C	0°C~60°C
Storage Temperature	-20°C~60°C	-20°C~60°C	-20°C~60°C
Dimension (LWD)	389×267×38mm	579×376.5×45 mm	670×425×45mm
Weight	3.2kg / 12 kg (with case)	8.6kg / 17.1kg (with case)	9.4kg / 21 kg (with case)

# 6. TROUBLE SHOOTING

#### 1. Only black-and-white display.

Check whether the color saturation is properly setup or not.

#### 2. Power on but no pictures.

Check whether the cables of HDMI, VGA, DVI and 3G-SDI are correctly connected or not. Please use the standard power adapter coming with the product package. Improper power input may cause damage.

#### 3. Wrong or abnormal colors.

Check whether the cables are correctly and properly connected or not. Broken or loose pins of the cables may cause a bad connection.

#### 4. When on the picture shows size error.

Press "MENU  $\rightarrow$  Function  $\rightarrow$  Underscan" to zoom in/out pictures automatically when receiving HDMI signals

#### 5. Other problems.

Please press "MENU" button and choose "MENU  $\rightarrow$  System  $\rightarrow$  Reset  $\rightarrow$  confirm".

#### 6. According to the ISP, the machine cannot function properly.

ISP for program upgrades, non-professionals do not use. Please reboot your device if press accidentally!

#### 7. No Sound.

Press HDMI button if no sound; if still unavailable, please contact the technician.

#### 8. No signal displayed when connecting with HDMI 1.

Please long press HDMI 1 button for 3-5 seconds to activate HDMI signal.

Note: Due to constant effort to improve products and product features, specifications may change without notice.

#### Appendix 1

# **3D LUT of Loading Manual**

BM-4KS supports 3DLUT to load the color calibration document and the User Log by using flash disk

# 1. Format Requirement:

• LUT format:

•

Туре:	.cube
3D Size:	17x17x17
Data Order:	RGB
Table Order:	RGB
USB flash disk ve	ersion

USB:	2.0	
System:	FAT32	
Size:	<16G	
Color calibratio	on document:	Rec709.cube

• User Log: User1 ~User3.cube

## 2. LUT Format Conversion

The format of LUT should be transformed if it doesn't meet Lilliput's requirement. It can be transformed by using Lut Converter (V1.3.30).

#### 2-1. Activate Lut Converter

■ 输入许可序列号		? X
Please tell th	e manufacturer ID of the product to get Key !	
Product ID :	087604760612059606120492046005320636	
Enter Key :	I	
	Ok	

One individual Product ID for one computer. Please send the ID number to Lilliput to get an Enter Key. Then the computer gets the permission of Lilliput Lut Converter after inputting the Enter Key.

#### 2-2. Enter the Lut Converter interface after input the Enter Key

Lut Converter (v1	.3.30)			
Input File		Output File		语言/Language: English 🔻
File Name		File Path		
Туре		Type	. cube	
Default Order		3D Size	17 •	
Data Order	RGB	Default Order	V	
Table Order	BCR -	Data Order	BGR •	
3D Size		Table Order	BGR •	
1D Size				
Dimension				Generate Lut

#### 2-3. Click Input File, then select \*LUT

Lut Converter (v1	1.3.30)		100	
Input File	]	Output File		语言/Language: English
File Name	/ColorSpace Image.cube	File Path		
Туре	. cube	Type . cu	be 🔻	
Default Order		3D Size 17	•	
Data Order	RGB	Default Order 📝		
Table Order	BGR 👻	Data Order BGR	-	
3D Size	17	Table Order	•	
1D Size	0			
Dimension	30			Generate Lut

2-4. Click Output File, and then select the file name as required format. Such as:

Rec709.cube, 3D Size: 17, Data Order: RGB, Table Order: RGB.

Input File		Output File		语言/Language: English マ
File Name	/ColorSpace Image.cube	File Path C:/Users/	/Administrator/Desktop/Rec709. cube	
Туре	. cube	Type .cube	•	
Default Order	V	3D Size	•	
Data Order	RGB	Default Order		
Table Order	BGR •	Data Order	RGB	
3D Size	17	Table Order	RGB	
1D Size	o			
Dimension	3D			

Please note: The format which shown in Red Box above should be selected to RGB.

2-5. Click Generate Lut button to finish the transform.

### 3. USB Loading

• The USB flash disk must be formatted before using to make sure that there are no other files in the root directory.

• Copy needed files to the root directory of the USB flash drive.

Please note that the system only supports updating one LUT table at a time. Therefore, only a single file to be loaded can be copied to the USB flash drive. If it needs to update more LUT tables, please delete other files in USB flash disk and repeat the above steps.

 Power on the device, insert the corresponding video signal into any video signal interface, and switch the signal to the corresponding channel to make sure the device displays normally.

(It doesn't suggest that update the LUT table when there is no input signal as the device will enter the power saving mode in such situation.)

Insert the flash disk into the USB interface on the device and wait for about 5 seconds. It will pop-up prompt box "Load Rec709.cube" after detecting the flash disk. Operate by using press "MENU", "<", ">", "EXIT" on the front of device. Click "YES" to load, and click "NO" or press "EXIT" to exit.

The device displays a black screen after confirmed the loading, and it will update the corresponding LUT table back-stage according to the name of the updated LUT.

The device will be restarted automatically after completed. The whole updating process takes about 6 seconds according to the updated LUT name.

Please activate and set up the updated LUT table under the menu after restart.
It doesn't need to be reset if the current updated LUT has been selected before updating.

Please note it only calibrates the color for Rec709 mode and upload it to the device in the factory. User1~User3 is grayed out and disabled in the menu. After loading the user LUT table, the corresponding button will be shown as blue and able to be use, shown as the following figure.



Before loading

After loading